


## Front Top Light Replacement


The complimentary front top light is included in the package for easy and quick maintenance.




1) Unplug the main plug and take out the body from the vehicle.

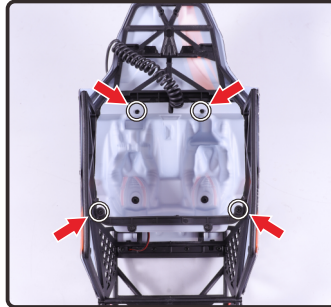


2) Unscrew the four screws as shown to take out the cockpit.

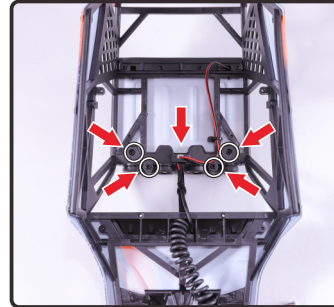


3) Unscrew the four screws as shown to dismantle the front top light cover.

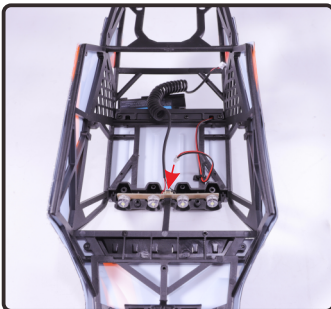


4) Unplug the plug and open the front top light cover.

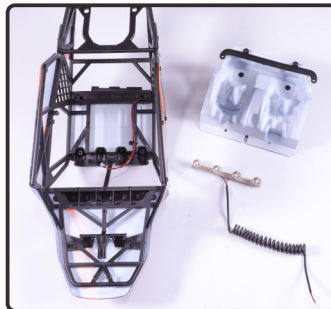


5) Take out the front top light.

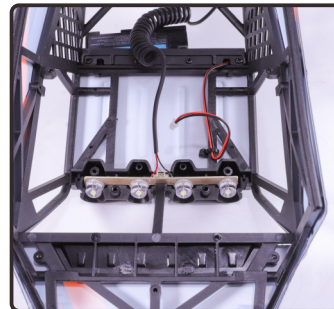

6) Replace with the new front top light.

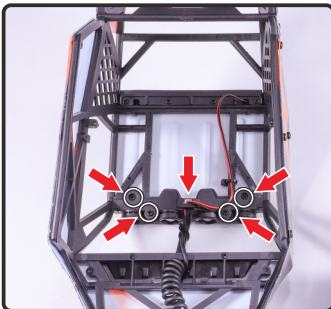

7) Replace the front top light cover and secure it with the four screws. Do not forget to plug in.

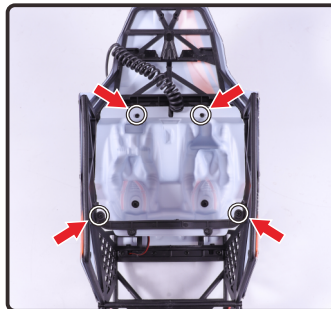

8) Install the cockpit with the four screw.



9) Replacement is ready.

# QR CODE

Scan to see how to replace with the new front top Light